


Quick Installation Manual
APX 5.0~30.0P-S2

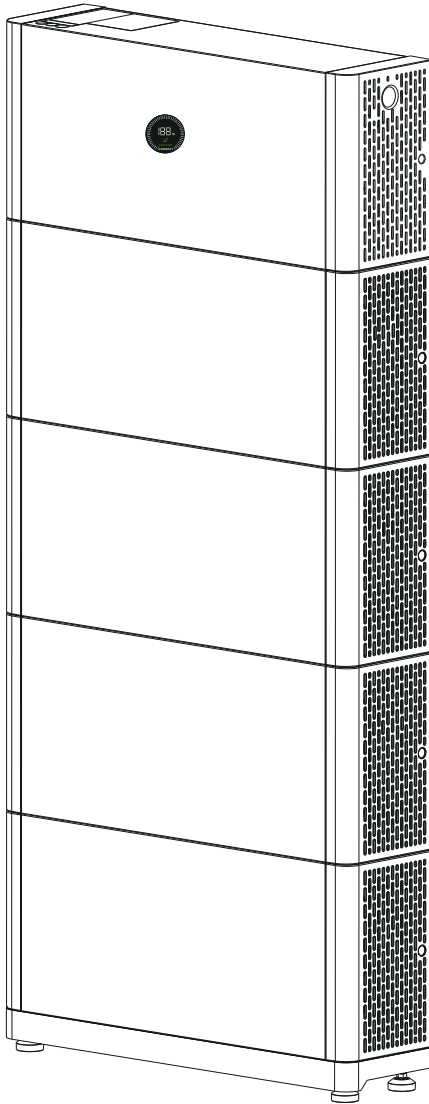

Environment requirements



Max.+50°C




Min.-10°C



RH + 5%~ +95%

Installation tools



M6



M6 2 N • m




M4 1 N • m



Dimensions

Unit:mm

APX 98034-P2
(Power Module)

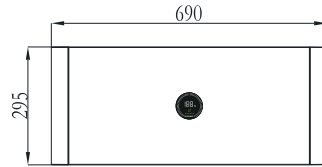


APX 5.0P-B1
(Battery Module)

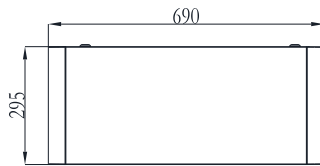


1.Inspection upon delivery

1-1 Checking the APX 98034-P2 packing list


Please check that the contents are complete

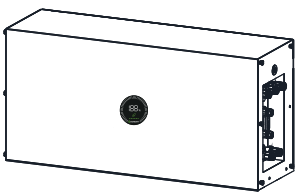


APX 98034-P2 (PM)

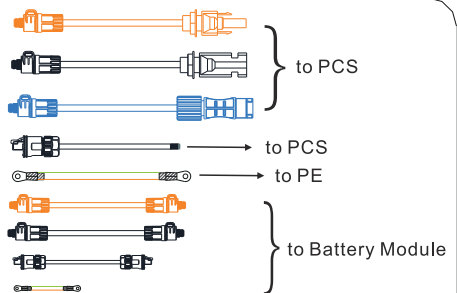


System cable

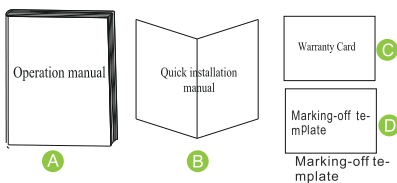


- A** Operation Manual *1
- B** Quick installation manual *1
- C** Warranty Card *1
- D** Marking-off template *1

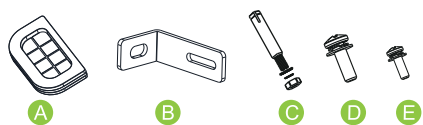

- A** Protective rubber ring *4
- B** Anti-tipping plate *2
- C** M6 expansion screw *2
- D** M6x12 stainless steel screw *1
- E** M4x9 stainless steel screw *3

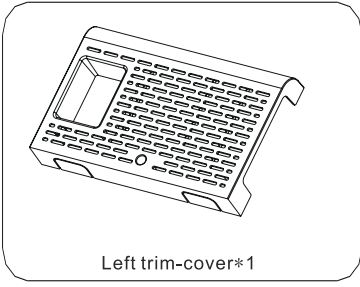


Left trim-cover*1

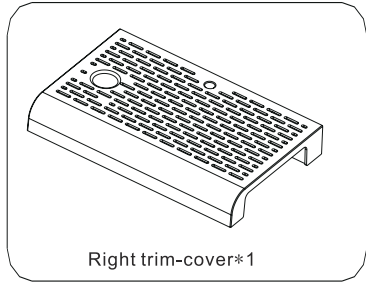


Right trim-cover*1


1-2 Checking the APX 5.0P-B1 packing list

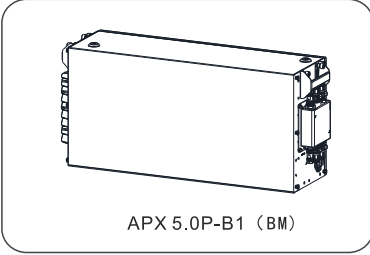


APX 5.0P-B1 (BM)

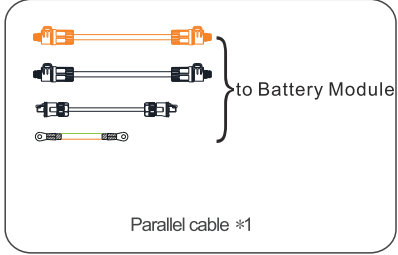


Parallel cable *1

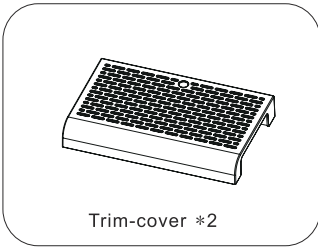

Trim-cover *2

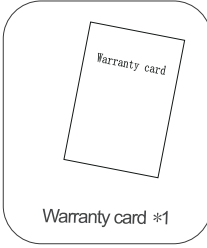


Warranty card *1

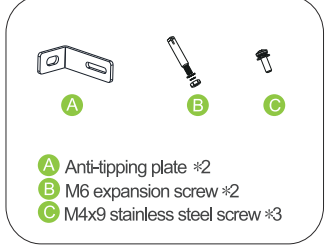


- A Anti-tipping plate *2
- B M6 expansion screw *2
- C M4x9 stainless steel screw *3

1-3 Check accessories

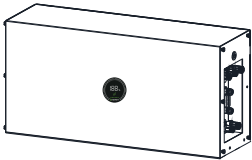


APX 98034-P2

A

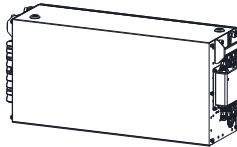


APX 5.0P-B1

B

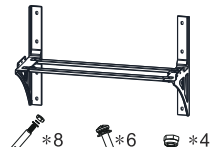


Wall bracket

C

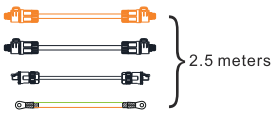

APX 5.0P-B1 Parallel extension cable

D



APX 5.0P-B1 Base

E




Cascading cable

F


| Battery Capacity | Floor-mounted Installation Compound Mode | Wall-Mounted Installation Compound Mode |
|------------------|--|---|
| 5kWh | A+B+E | A+B+C |
| 10kWh | A+B*2+E | A+B*2+C |
| 15kWh | A+B*3+E | A+B*3+C |
| 20kWh | A+B*4+E | A+B*4+C |
| 25kWh | A+B*5+E*2+D | A+B*5+C*2+D |
| 30kWh | A+B*6+E*2+D | A+B*6+C*2+D |
| 40kWh | A*2+B*8+E*2+F | A*2+B*8+C*2+F |
| 50kWh | A*2+B*10+E*4+D*2+F | A*2+B*10+C*4+D*2+F |
| 60kWh | A*2+B*12+E*4+D*2+F | A*2+B*12+C*4+D*2+F |

2. Installation Environment Requirement

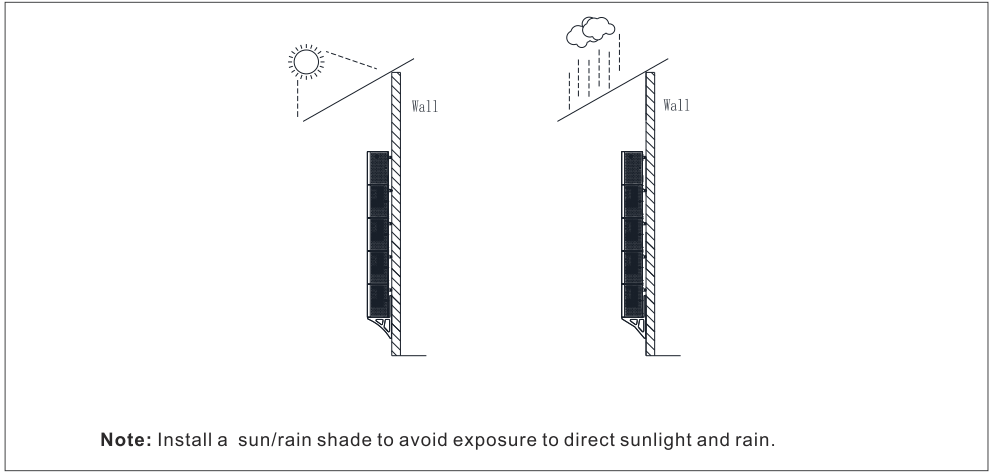

3. Floor-mounted installation


3-1 Installation Location Requirements

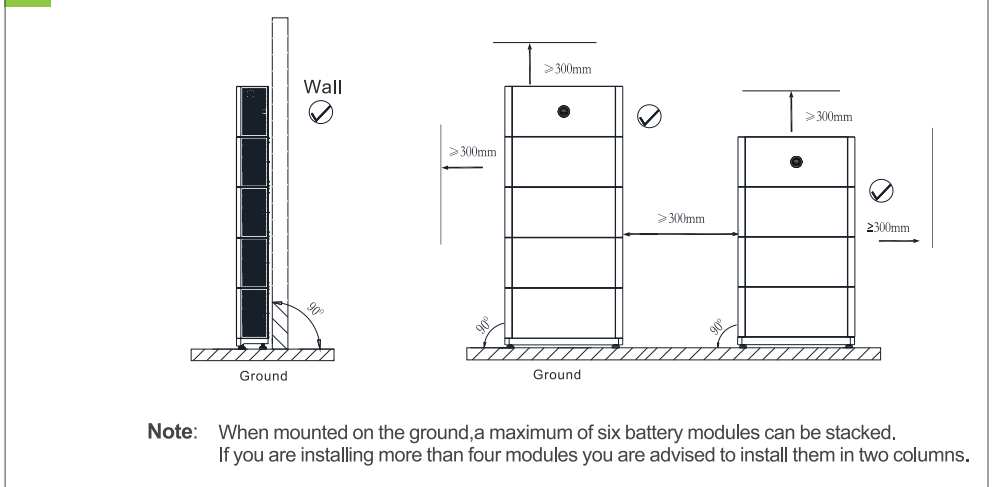







3-2 Installation Procedure

Unit:mm

Mounting Hole Dimensions


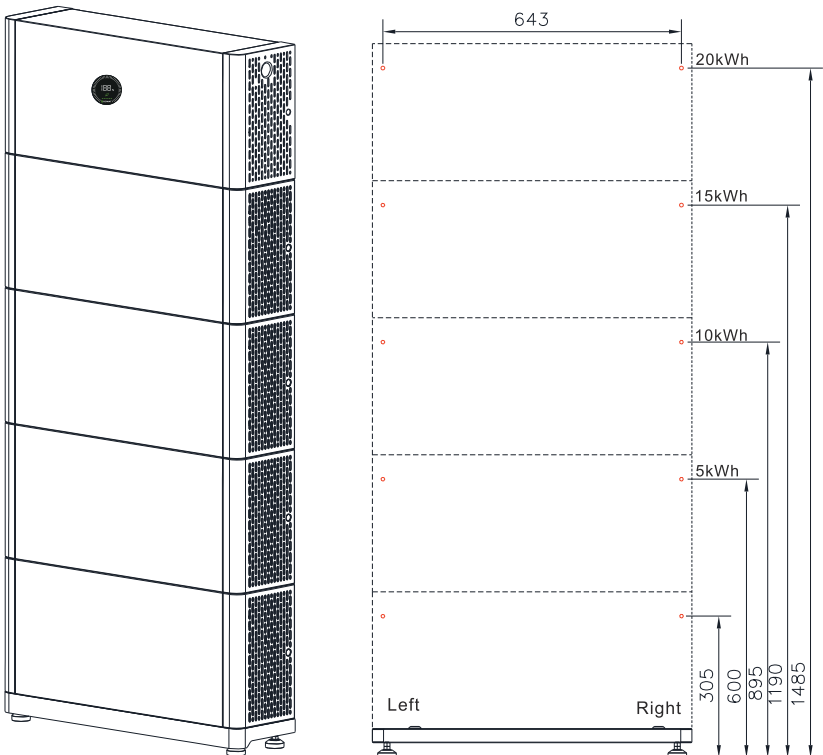


1

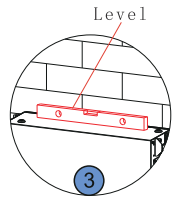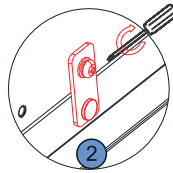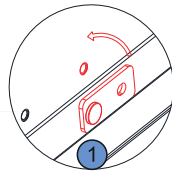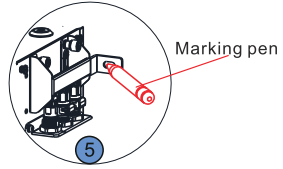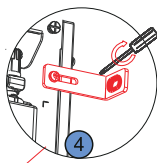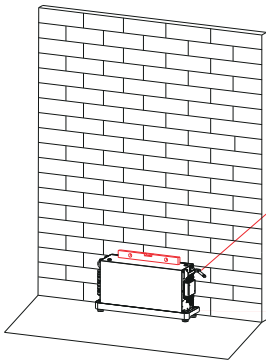






- ① ② Install the connecting pieces on both sides and tighten the two screws .
- ③ Level the battery module using a level.
- ④ Install the anti-tipping plates on both sides and tighten the two screws .
- ⑤ Mark the hole positions.

2

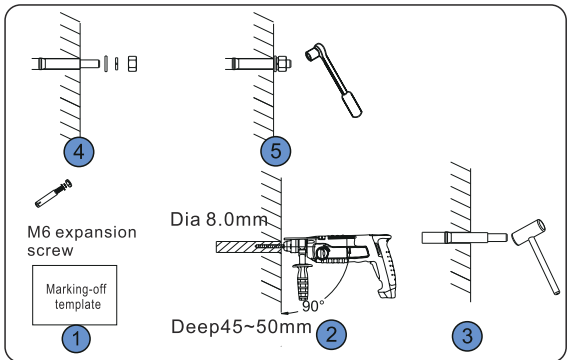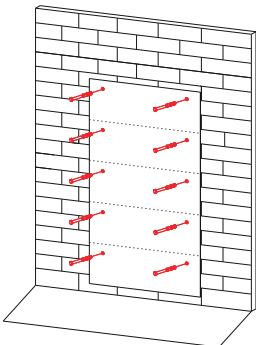






- ① The marking-off template ensures that the alignment marks are properly.
- ② ③ ④ ⑤ Fix the M6 expansion screw into the wall.

3

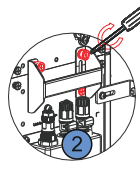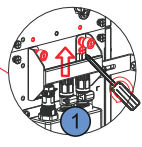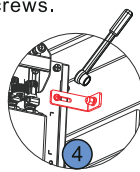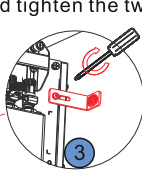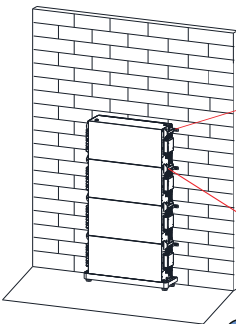

- ③ Install the connecting pieces on both sides and tighten the two screws.
- ④ Secure the module on both sides to the wall.
- ① Loosen two screw, move up the handle on both sides.
- ② Tighten the two screws, fix the two battery modules.


4

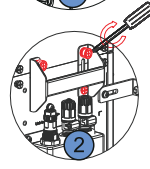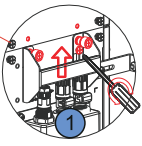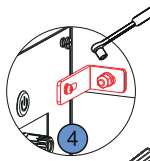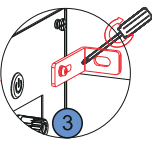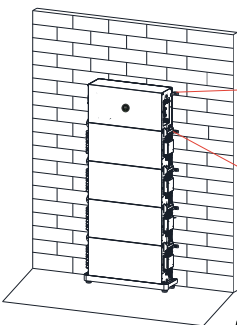

- ③ Install the connecting pieces on both sides and tighten the two screws.
- ④ Secure the module on both sides to the wall.
- ① Loosen two screw, move up the handle on both sides.
- ② Tighten the two screws, fix the battery and the power modules.

4. Wall-Mounted Installation

4-1 Installation Location Requirements

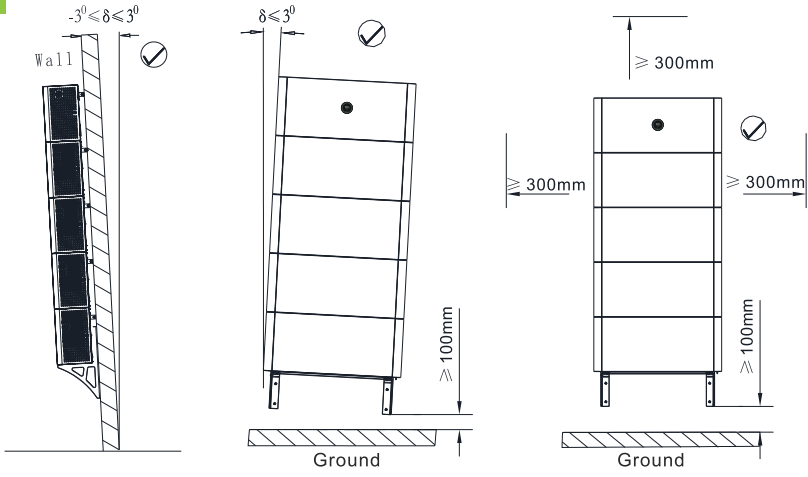


Note: When mounted on the wall, a maximum of five battery modules can be stacked. Please ensure that the load-bearing capacity of the wall exceeds 280 kg.


4-2 Installation Procedure

Unit:mm

Mounting Hole Dimensions


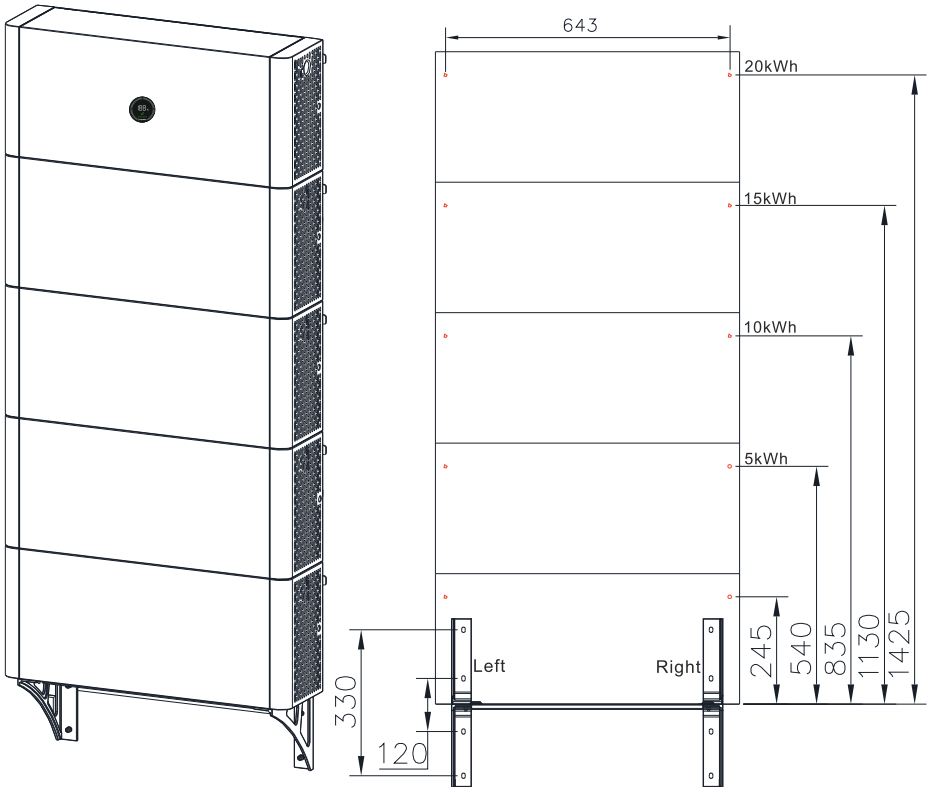


1

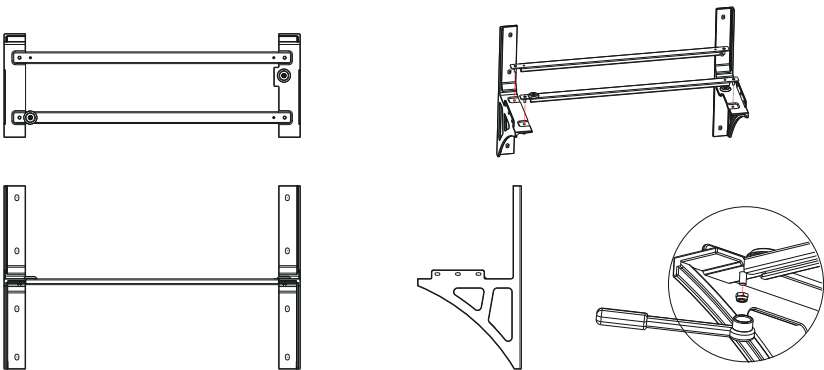


install the wall bracket


2

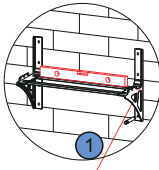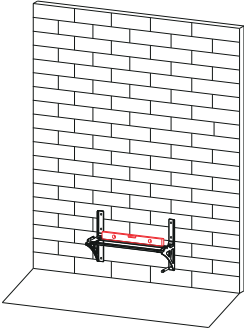

Level


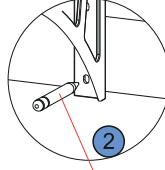


Marking pen


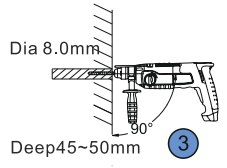


- 1 Level the battery Module using a level.
- 2 Mark the hole positions.
- 3 Drilling eight holes.

3


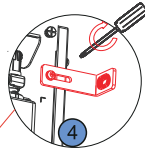
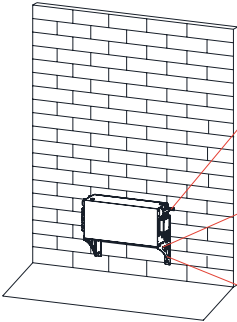


- 4 Install the anti-tipping plates on both sides and tighten the two screws.

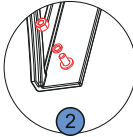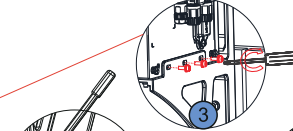

- 1 2 Fix the bracket on the wall.
- 3 Fix the battery module on the bracket.

4

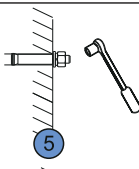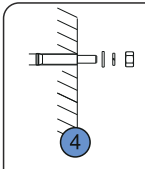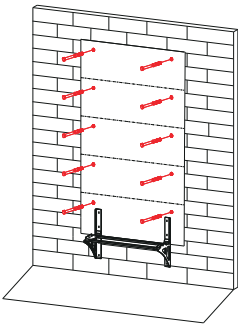

M6 expansion screw




Marking-off template

Dia 8.0mm



Deep 45-50mm

- 1 The marking-off template ensures that the alignment marks are properly placed on the wall.
- 2 3 4 5 Fix the M6 expansion screw into the wall.


5

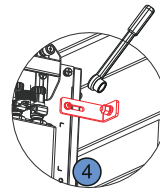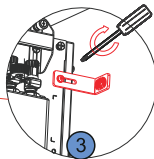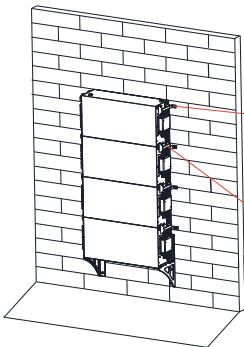

- 4 Secure the module on both sides to the wall.

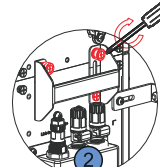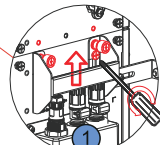


- 1 Loosen two screws, move up the handle on both sides.
- 2 Tighten the two screws, fix the two battery modules.

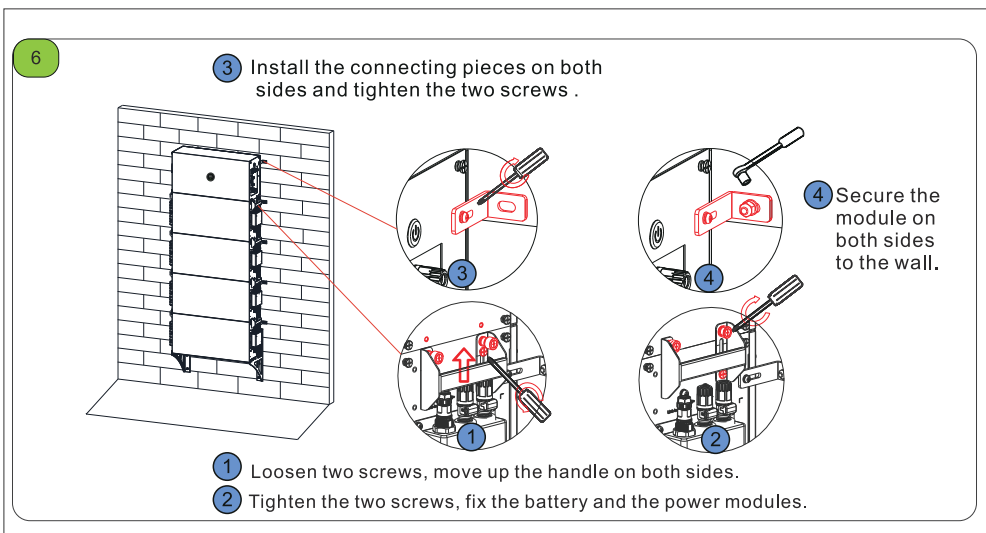


5.Wire Connection

5-1 APX 98034-P2 terminal & key description

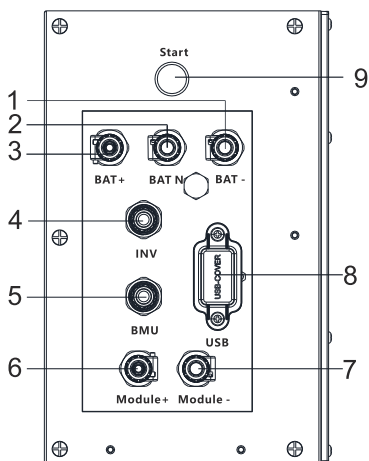

| | | |
|---|-----------------|--|
| 1 | BAT - | Battery negative terminal to connected to the PCS |
| 2 | BAT N | Battery neutral terminal to connected to the PCS |
| 3 | BAT + | Battery positive terminal to connected to the PCS |
| 4 | INV | Communication terminal connect to the PCS |
| 5 | BMU | Communication terminal connect to the battery module (Link-in) |
| 6 | Module+ | Connect to the positive battery terminal of the Battery Module (B+) |
| 7 | Module - | Connect to the positive battery terminal of the Battery Module (B-) |
| 8 | USB | USB terminal |
| 9 | Start | Start key |


5-2 APX 5.0P-B1 Connection end face introduction

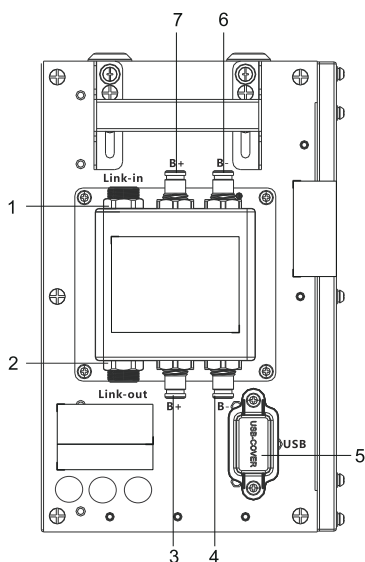


| | | |
|---|-----------------|--|
| 1 | Link-in | Communication terminal Connect to another BM(Link-out) or the PM(BMU)Communication |
| 2 | Link-out | Communication terminal Connect to another BM(Link-in) |
| 3 | B+ | Battery positive terminal Connect to another BM(B+) |
| 4 | B- | Battery negative terminal Connect to another BM (B-) |
| 5 | USB | USB terminal |
| 6 | B- | Battery negative terminal Connect to another BM(B-) or the PM (Module-) |
| 7 | B+ | Battery positive terminal Connect to another BM(B+) or the PM (Module+) |

5-3 Battery Capacity Description

The battery supports power and capacity expansion. Two power control modules can be connected in parallel. A maximum of six battery modules can be connected to a single power module.

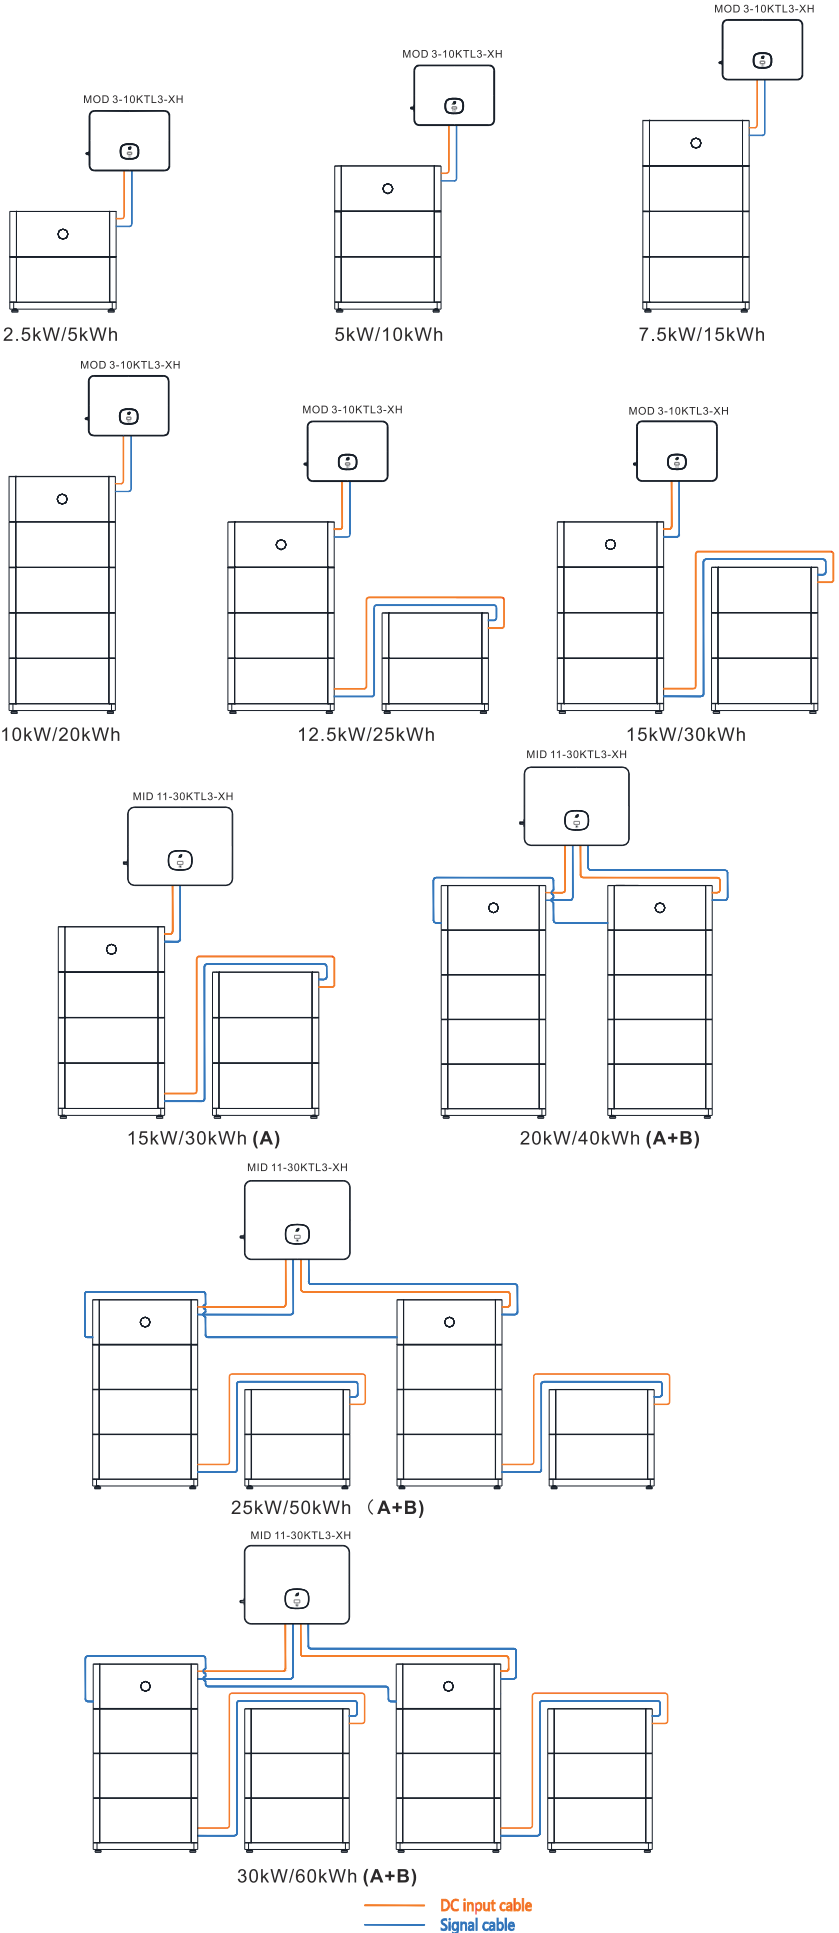


5-4 Wiring diagram

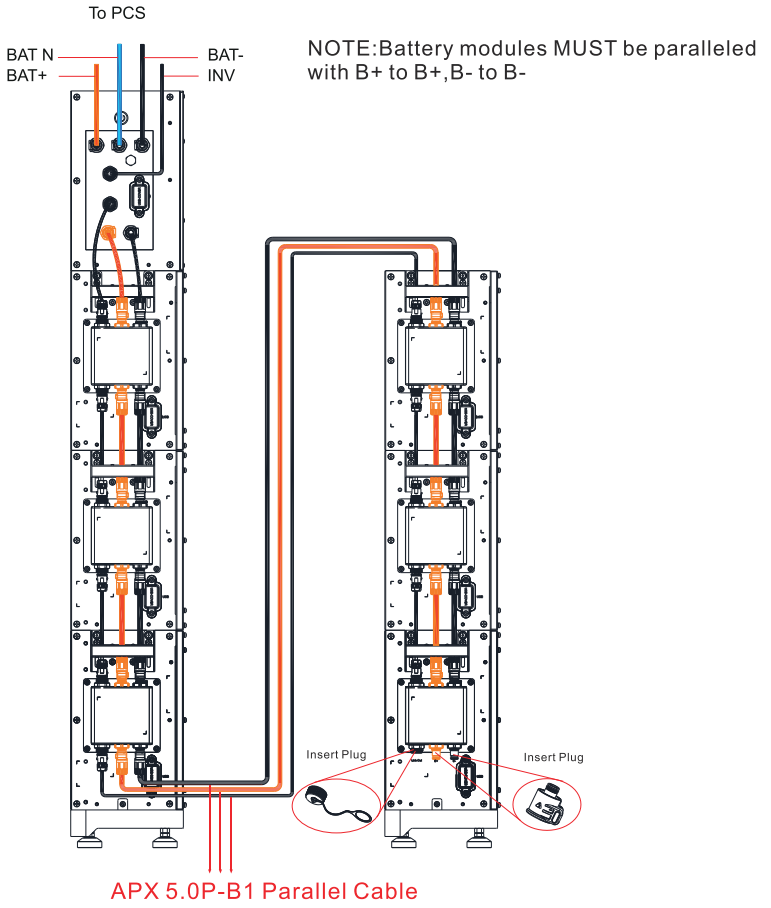


wire connection sequence:

ground cable → communication cable → power cable



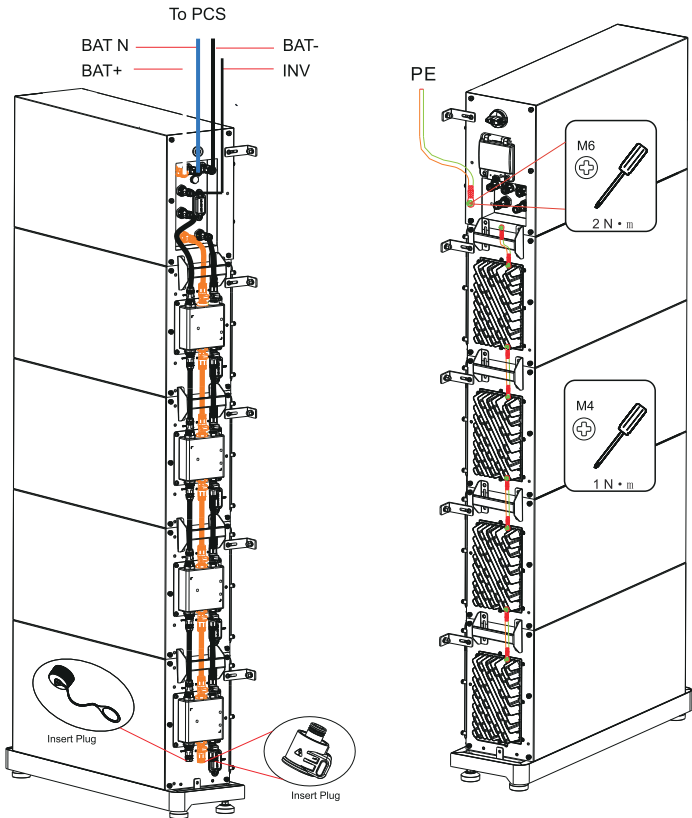


Note: It is not recommended to install a DC circuit breaker between the battery system and the PCS. If you want to install a DC circuit breaker with rated working voltage greater than 1000V and rated working current greater than 63A, do not operate the DC circuit breaker with power-on, otherwise the machine may be damaged.



5-5 Routing Cables Out of the Cable Hole

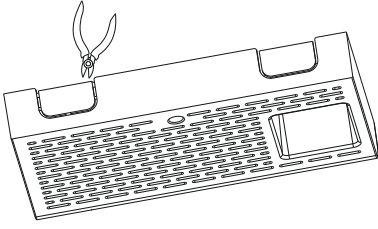

APX 98034-P2 Left trim-cover

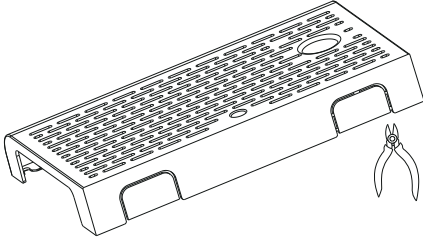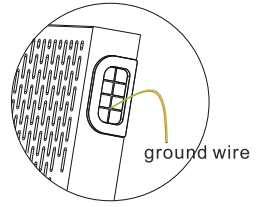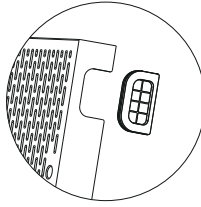


APX 98034-P2 Right trim-cover

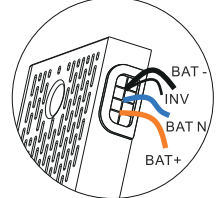
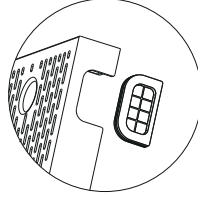


5-6 Communication port connection




| APX 5.0-30.0P-S2 | | | MOD 3-10KTL3-XH | | | MID 11-30KTL3-XH | | | |
|------------------|------------------------|------------|-----------------|------------------------|------------|------------------|------------------------|----|------------|
| Silk screen | Terminal serial number | Definition | Silk screen | Terminal serial number | Definition | Silk screen | Terminal serial number | | Definition |
| | | | | | | | A | B | |
| INV | 1 | WAKE-(W-) | COM | 10 | BAT.EN- | COM | 10 | 30 | BAT.EN- |
| | 2 | WAKE+(W+) | | 9 | BAT.EN+ | | 9 | 29 | BAT.EN+ |
| | 7 | RS485_B(B) | | 8 | RS485B2 | | 8 | 28 | RS485B2 |
| | 8 | RS485_A(A) | | 7 | RS485A2 | | 7 | 27 | RS485A2 |





MOD3-10KTL3-XH






Connector

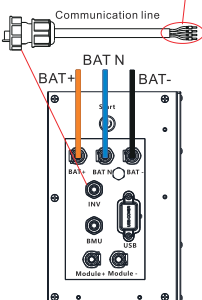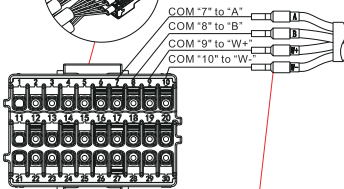

MID11-30KTL3-XH




Connector

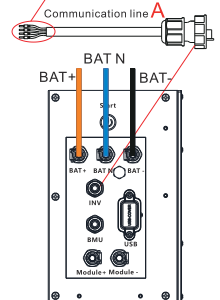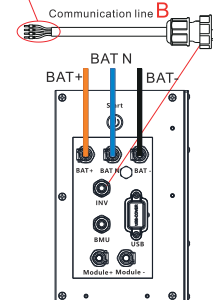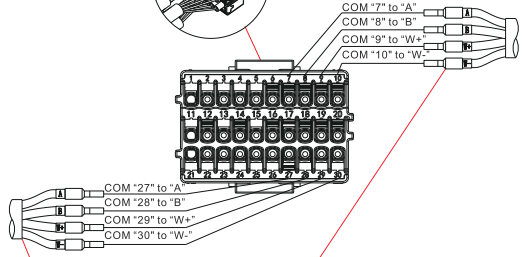


6. Terminal Connection

6-1 Power terminal

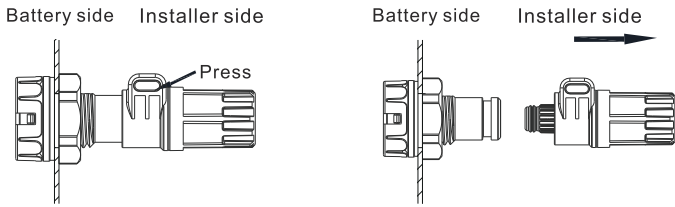

Note: Press the position indicated in the figure above before disconnecting the power terminal.

6-2 Installing the trim-cover

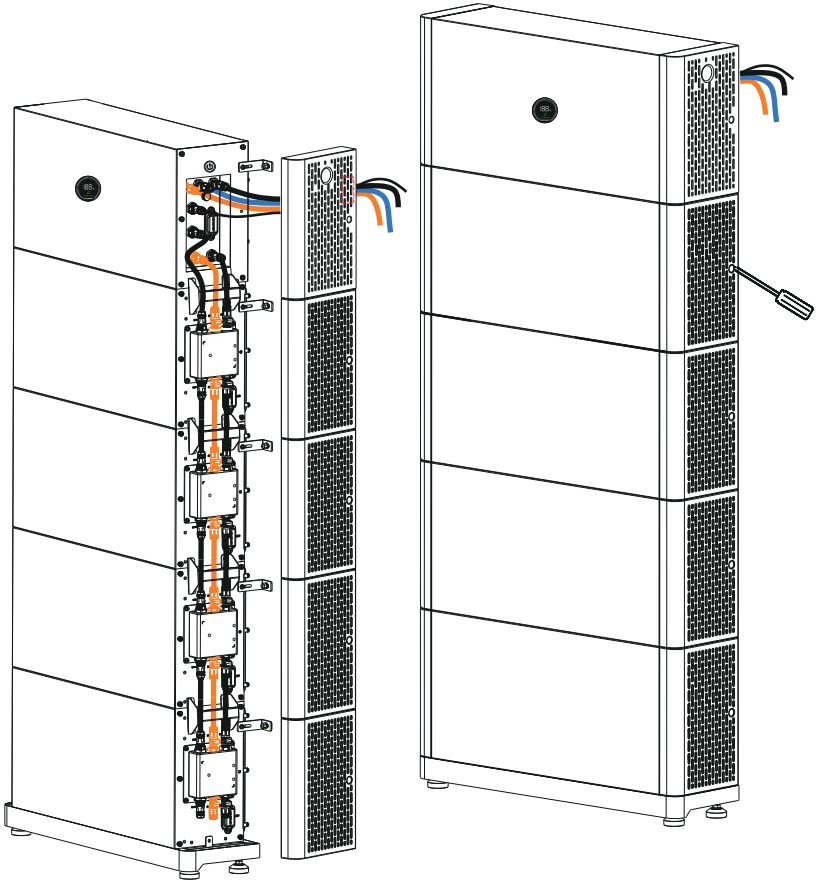

7. Key operation

| | | |
|-----------|---|--|
| Power on | <ol style="list-style-type: none"> 1. Turn on the DC Switch 2. Press the start key for more than 5S | |
| Power off | Turn off the DC Switch (waiting for over 90S) | |

Note: 1、 Before performing maintenance and repair work, ensure that the AC circuit breaker and the PV switch of the PCS, as well as the switch of the APX are disconnected. **Wait for 15 minutes after the system is powered off and make sure that the LOGO (GROWATT) indicator on the APX is off. Do not perform any operations until the system is completely shut down.**

2、 When multiple battery systems are used in parallel connection, you only need to press the start key of one module to start the system.

8. Service and contact

Shenzhen Growatt New Energy Co., Ltd
 4-13/F, Building A, Sino-German (Europe) Industrial Park,
 Hangcheng Ave, Bao'an District, Shenzhen, China

+86 755 2747 1942 service@ginverter.com

W:www.ginverter.com



Download
Manual



Growatt New Energy

GR-UM-289-A-02